


Scottie Pot Ornament

Ver 1.0.0

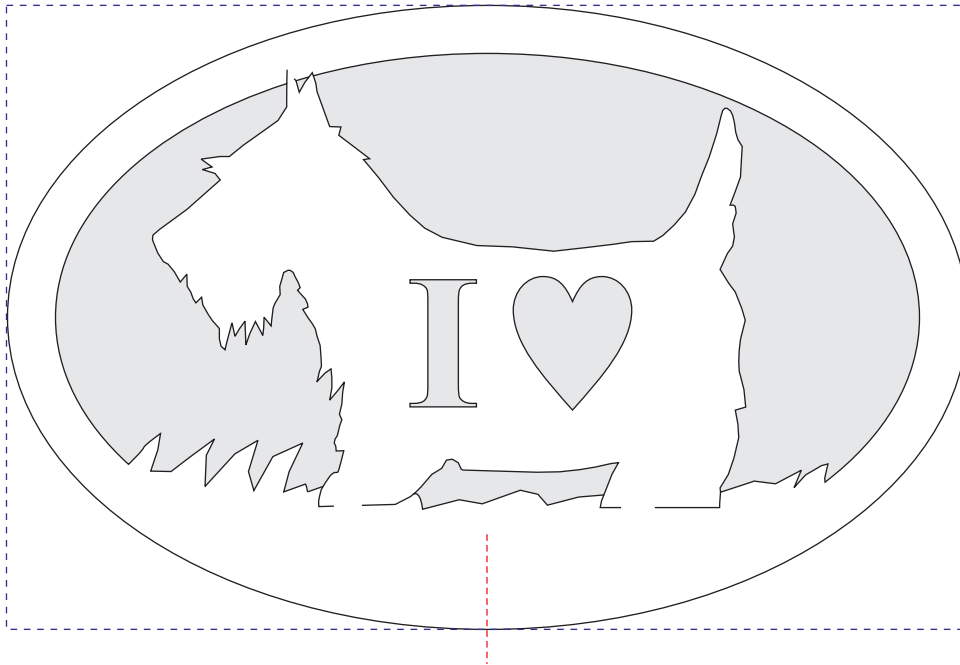

Instructions:

- Stack 2 to 4 layers of 1/4" wood
- Make sure top of blank stack is parallel to bottom. With a #53 drill bit drill holes in edges of each layer where the dotted red line is.
- Drill entry holes for fretwork & cut out waste.
- Cut around outside of ellipse.
- Sand and finish ornament. I use a 50/50 mixture of boiled linseed oil and paint thinner. Do not use a laquer or other non-water resistant finish.
- Glue 18 gauge florist wire into base of ornament. I use E6000 glue. Glue must be weather resistant.

© 2009 Tuliptree Crafts LLC. Permission is granted to cut this pattern on a scrollsaw for personal use or for sale up to 200 copies. For more, or for CNC/Laser or similar non-hand methods please contact Tuliptree Crafts LLC